

AJP 8

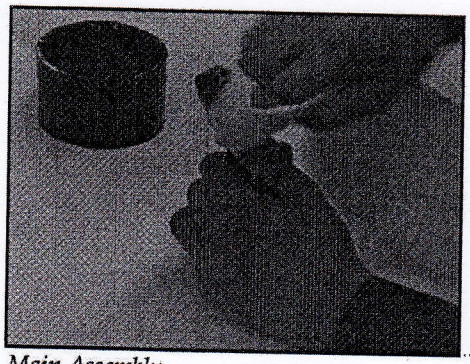


Main Assembly

Separate the bearing cap, and clean the bearing bore.

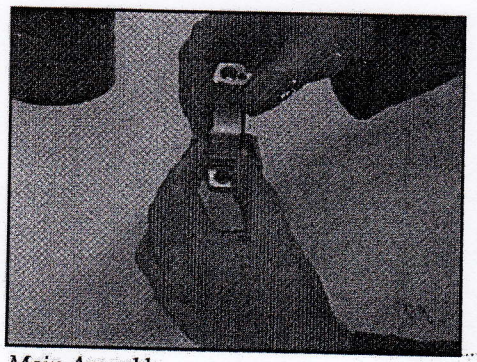


Main Assembly

Wipe the bearing with spirit wipe, and fit to the con rod.

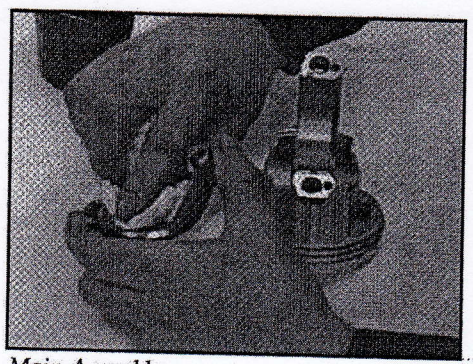

Main Assembly

Repeat for the cap...

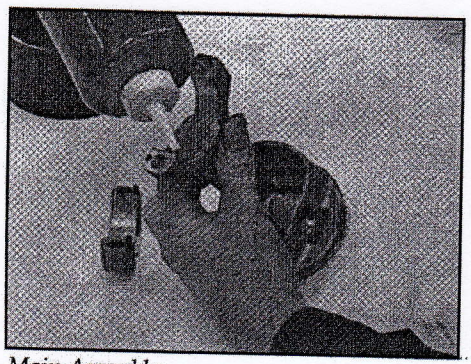

Main Assembly

...lubricating the shells with oil.