

AJP 8

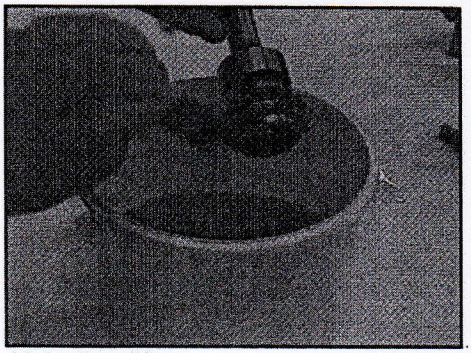


Main Assembly

Wash the jackshaft with spirit wipe and blow dry.

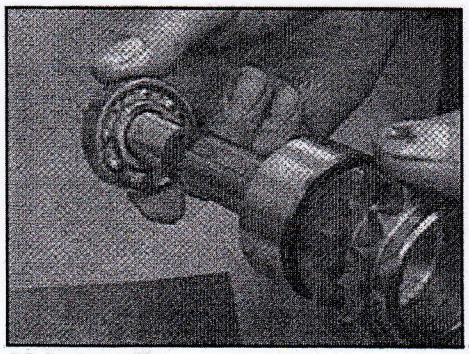


Main Assembly

Before pressing on the bearing the plastic protective face that faces towards the gear has to be removed, then press home ,this is done so the bearing receives oil from the gear. Then fit the lip seal ,spring facing towards the bearing, protecting the lip from sharp key way with sellotape.

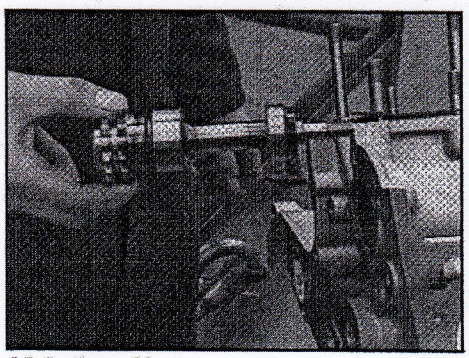

Main Assembly

Lubricate the needle roller with NULON, and the lip seal with rubber grease. Push the jackshaft into its bore...

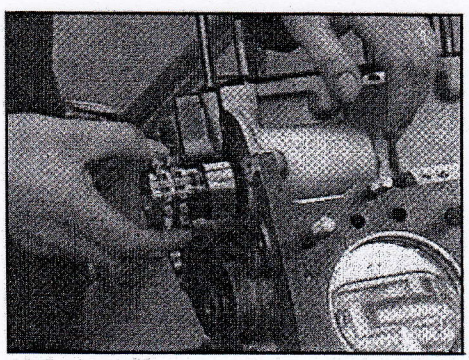

Main Assembly

...as the shaft protrudes from the rear...