

AJP 8

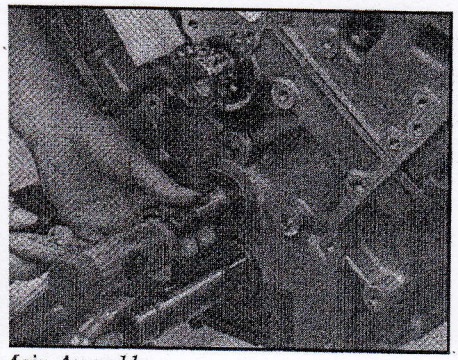


Main Assembly

Fit the half time pivot and thrust washer to the block using a soft faced hammer.
(Early engines only)
Or fit gear pivot bearing.
(Later engines only)

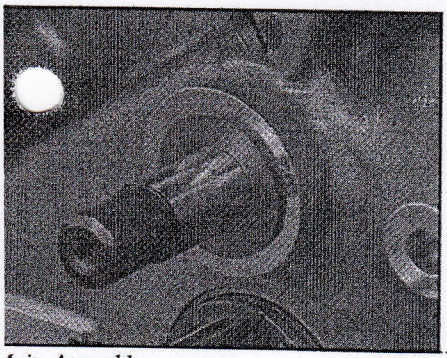


Main Assembly

Making sure that the thin thrust washer is fitted correctly....

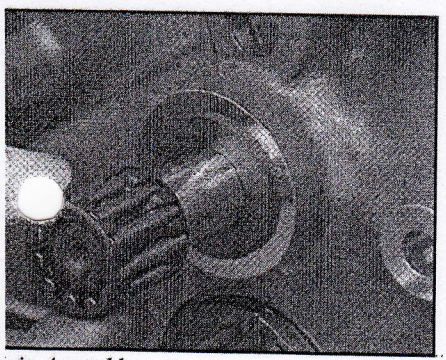

Main Assembly

...fit the half time needle roller...

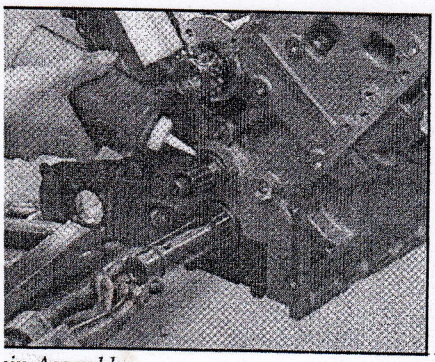

Main Assembly

... and lubricate it with engine oil.




Main Asse



Main Assen



Main Assem

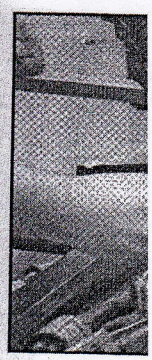

Main Assemb