
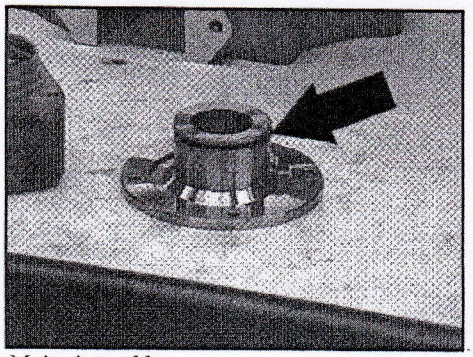



Main Assembly

Wash each of the clutch components. Fix the square section dowty seal (arrowed) and lubricate with rubber grease.

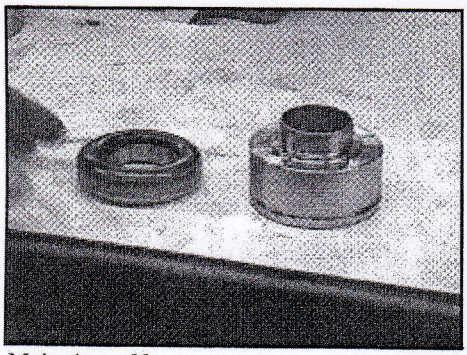


Main Assembly

Now press the clutch release bearing onto the clutch piston...

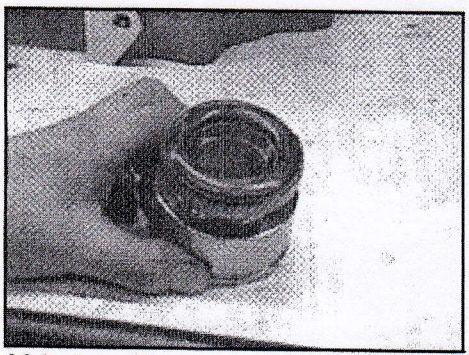

Main Assembly

...in the orientation shown.

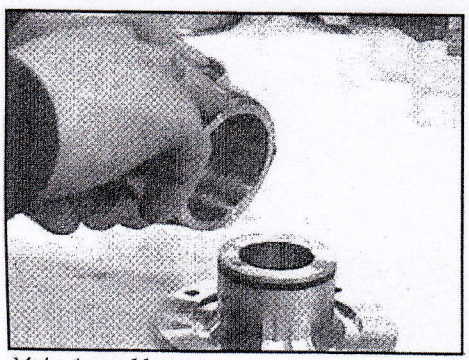

Main Assembly

Fit the dowty seal to the piston and lubricate with rubber grease.