

AJP 8

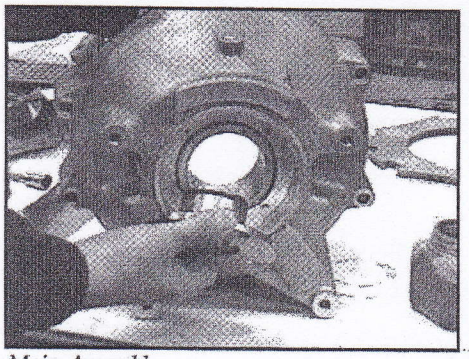


Main Assembly

Followed by the clutch inner cylinder.

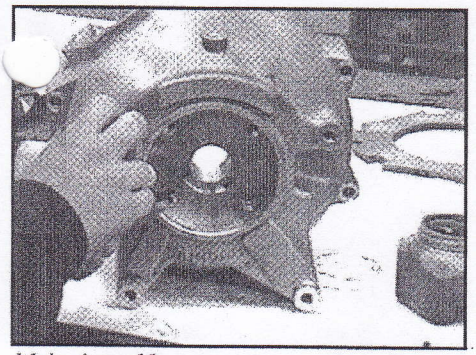


Main Assembly

Degrease the four mounting screws, apply loctite and torque to 15 ft lbs.

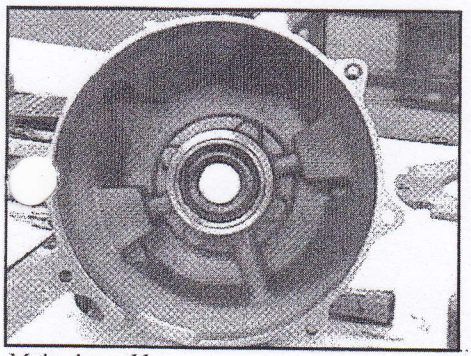

Main Assembly

Push the clutch piston in from the engine side.

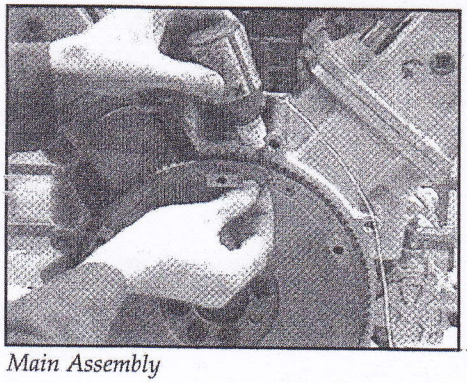

Main Assembly

Degrease, loctite and screw the three clutch locating pins to the flywheel. DO NOT OVERTIGHTEN.