
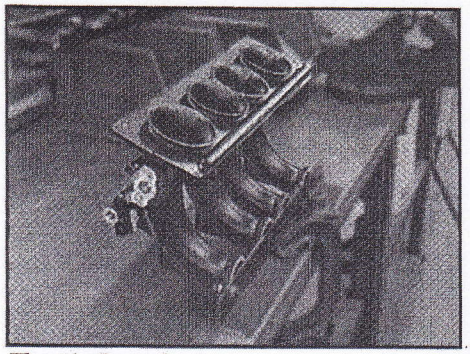



Throttle Control

Remove all swarf and clean throttle body.

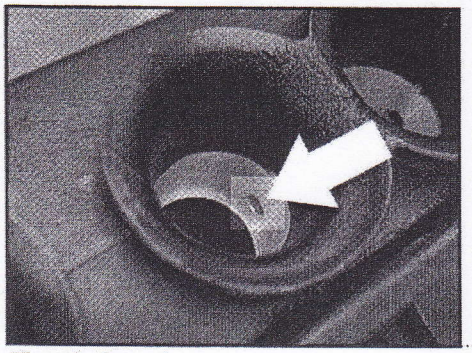

Throttle Control

Check throttle shaft holes for burrs.

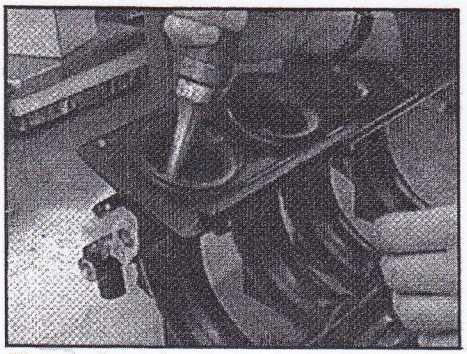

Throttle Control

If any present lightly remove.



Throttle Control

Ensure the throttle shaft is a free fit in the throttle body.