
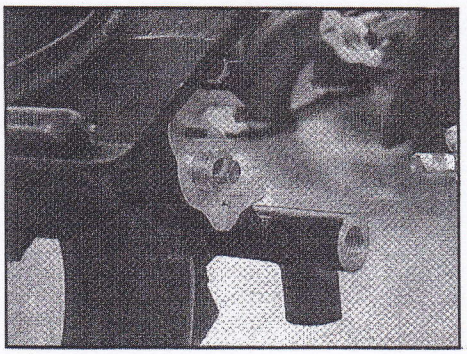



Throttle Control

Once the throttle shaft is a free fit, locate the shaft bushes and ream to size.

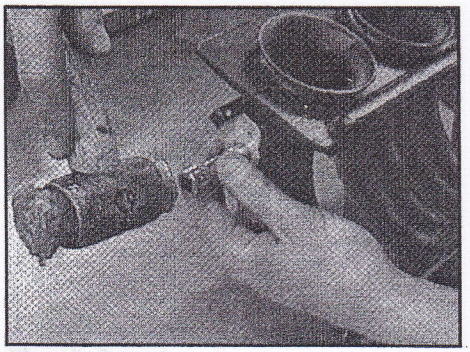


Throttle Control

Gentle tap home.

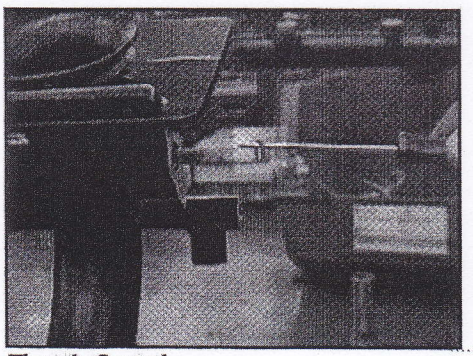

Throttle Control

Only when the bush has been reamed to size fit the throttle shaft seals and throttle shaft.

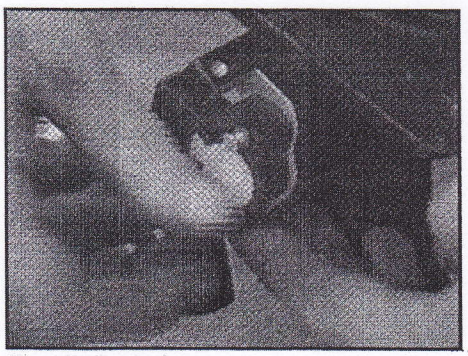

Throttle Control

Fit throttle Potentiometer.