

Service / Workshop Manual

Wiring Connector location diagrams

FRONT HARNESS CONNECTORS

J1 Bonnet Switch

Location:	Top of the passenger footwell.
Connection:	2 way

J2:A +B Brake Light Switch


Location:	Switch on back of brake pedal
Connection:	Spade connectors

J3 Cigarette Lighter

Location:	Behind cigarette panel
Connection:	3 way

J4 Column Pod Harness

Location:	Above the column harness
Connection:	2 way

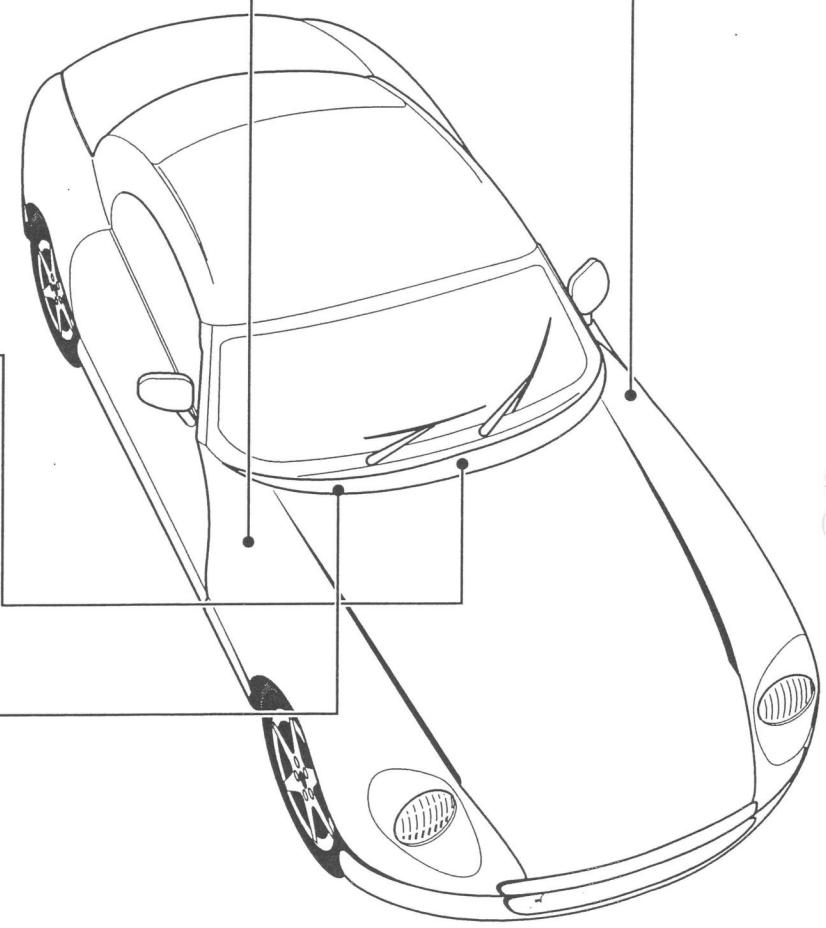

J5 Courtesy Light Switch

Location:	Bottom of passenger A post
Connection:	3 way

J6 Dash Switches Interface Unit


Location:	Behind dash panel
Connection:	9 way

J7 Dashboard Instrument Pod Connector

Location:	Above the steering column
Connection:	9 way

J8+9 Driver's Door Connector

Location:	Under door hinge recess
Connection:	1 x12, 1x3 way

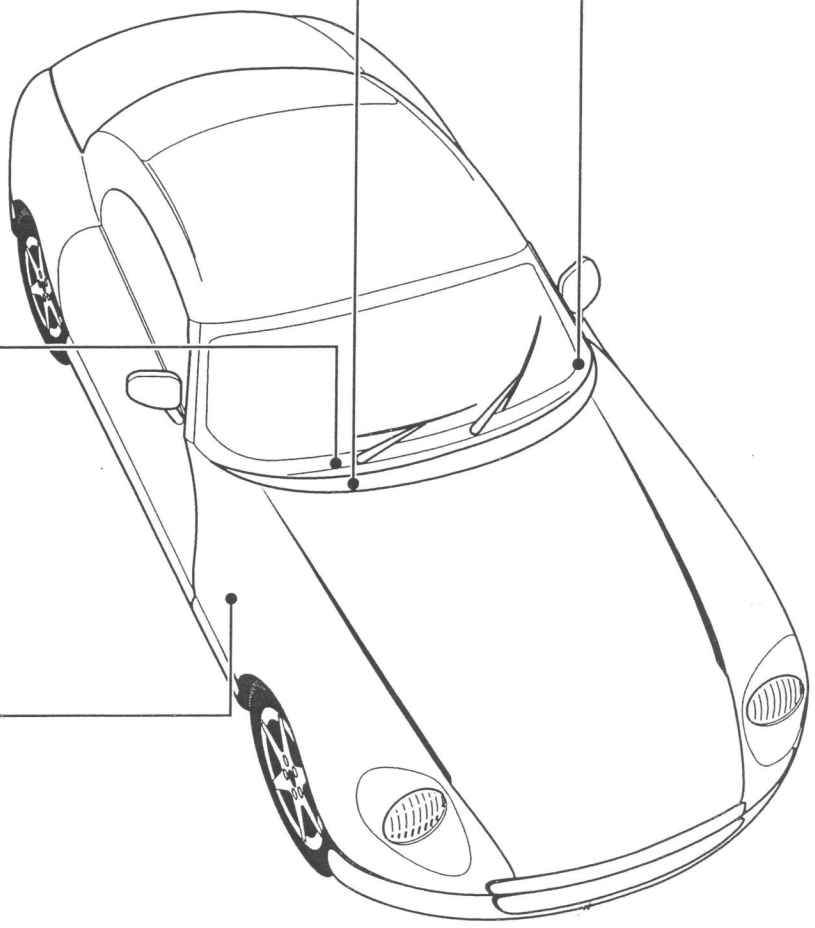

J10 Engine Harness Connector

Location:	Push back of passenger footwell
Connection:	19 way

J11:A+B Hand Brake Switch


Location:	Mirco Switch under handbrake
Connection:	spades

J12 Heater Box (Heated Air)

Location:	Drivers footwell
Connection:	

J13 Heater Box (Fresh Air and A/Con)

Location:	Passenger footwell
Connection:	

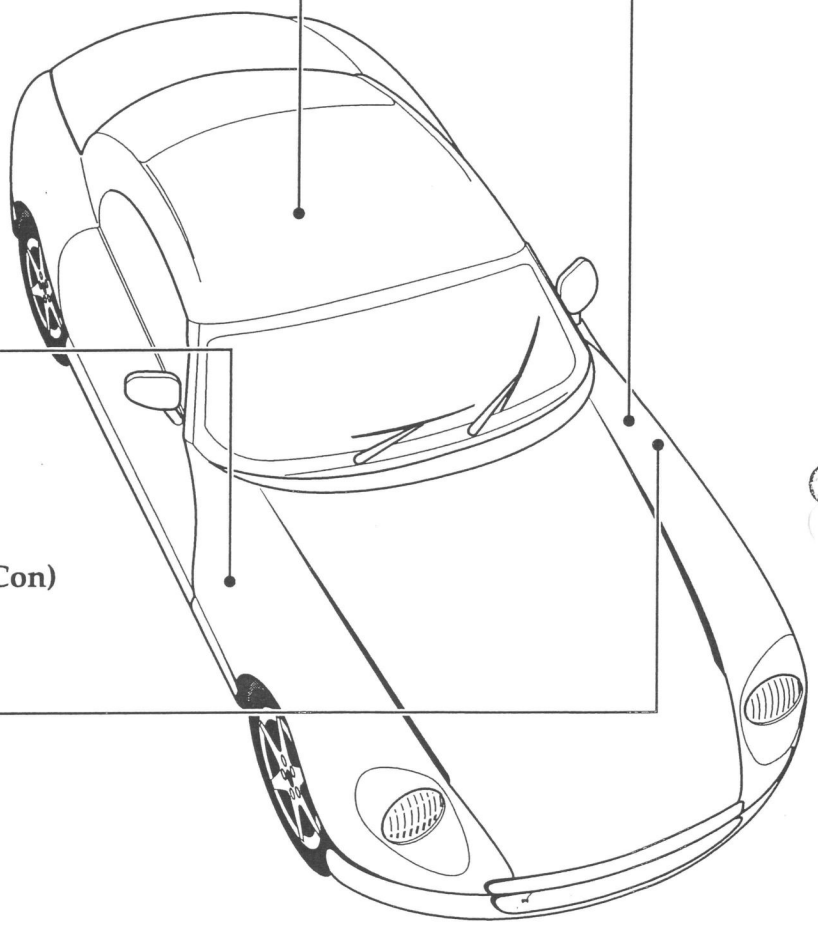

J14+15 Heater Control Unit

Location:	Pushed to back of passenger footwell
Connection:	2 x 17 way

J16 Ignition Switch


Location:	Behind centre panel
Connection:	2 way

J17 Inner Lock Button

Location:	Behind centre panel
Connection:	6 way

J18 +19 Passenger Door Connectors

Location:	Under hinge recess
Connection:	2 spades connectors

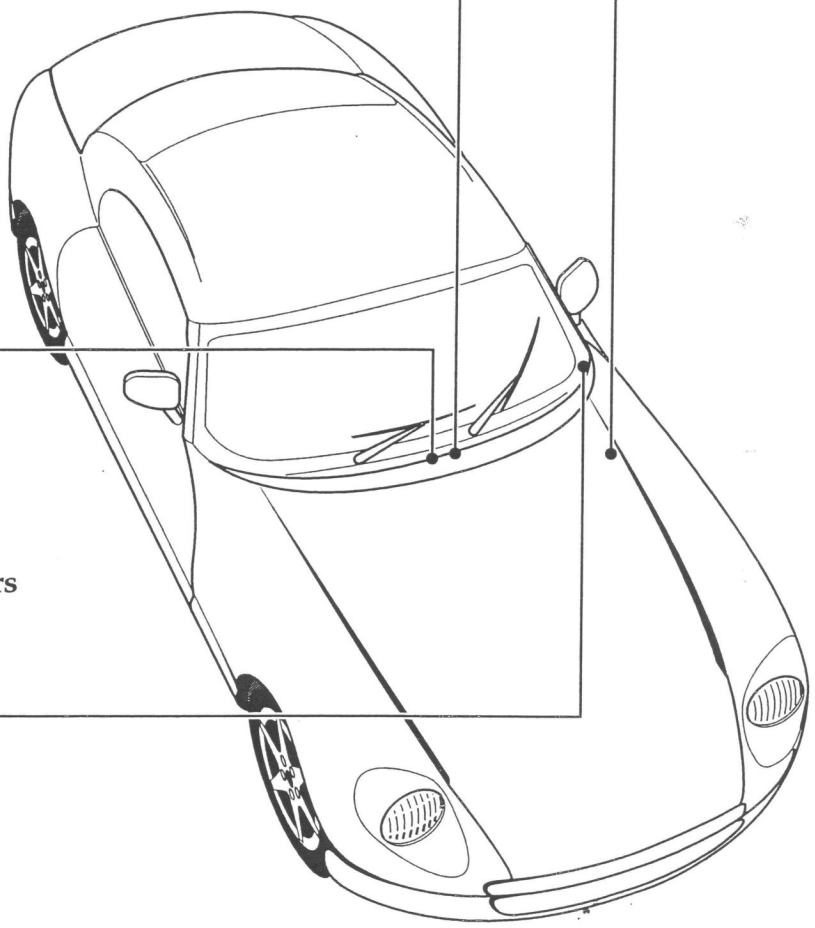

J20 Low Brake Fluid Switch

Location:	On top of brake fliud reservoir
Connection:	3 way

J21 Nose Connector

Location: Top of Passenger footwell


Connection: 19 way

J22+23 Radio

Location:	Behind Radio
Connection:	2 x 8 way

J24 Reverse Light Switch

Location:	Mirco switch on gearbox
Connection:	2 way sealed

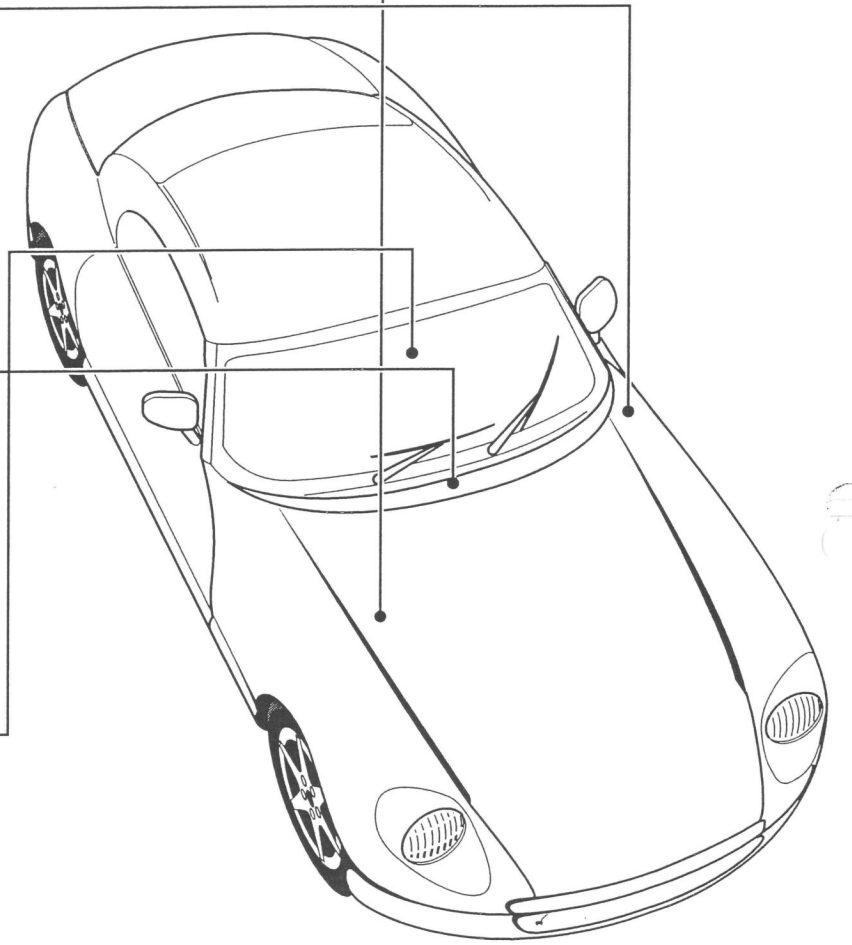

J25 Steering Wheel Control Unit

Location: Top of column mount

Connection: 17 way + 5 way
+ 5 ribbon way

J26 Window Switch Connectors

Location: Either side of radio

Connection: 2 x 6 way

J27 Passenger's Window Switch


Location: Either side of radio

Connection: 6 way

J28 Wiper Control Unit Connector


Location: Back of passenger footwell

Connection: 17 way

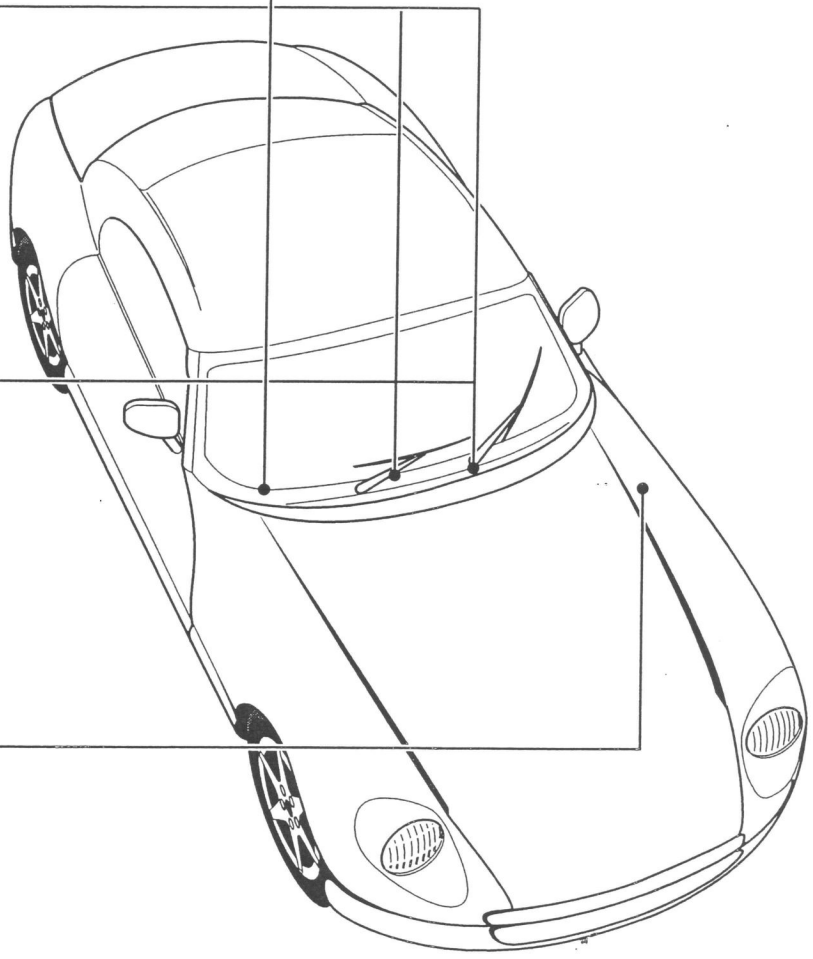

J28 Wiper Motor Connector

Locatation:	Engine Bay
Connection:	5 way

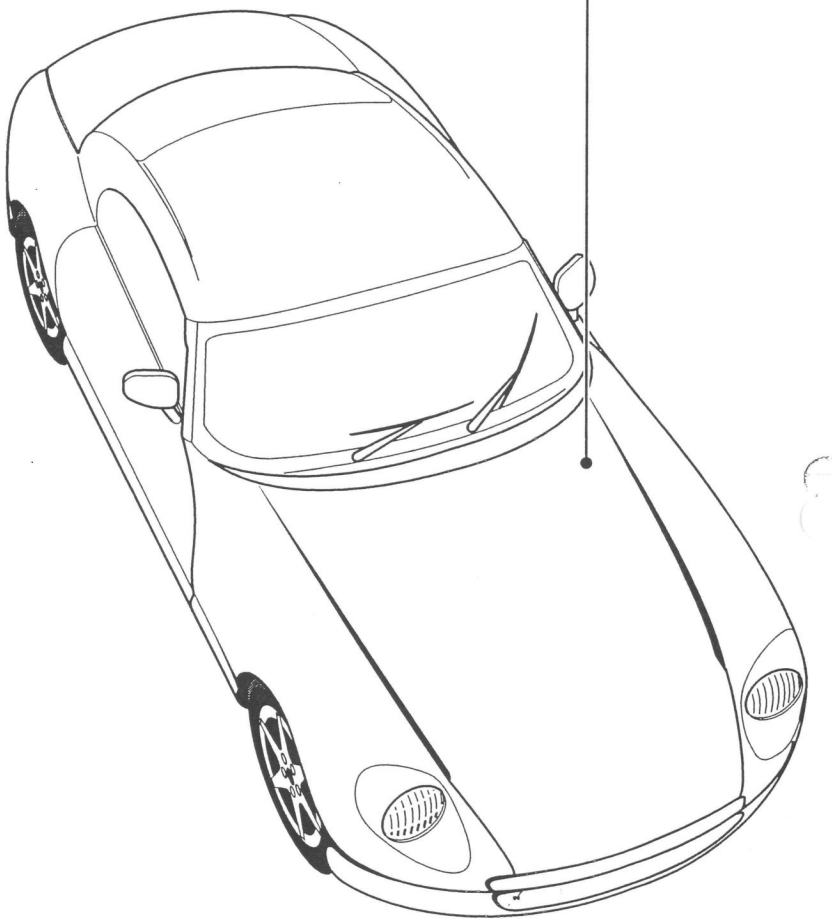

FRONT HARNESS MULITWAY CONNECTIONS

J30 Multiway Connector

Location:	Behind N/S passenger seat
Connection:	36 way

J31 Multiway Connector


Location:	Behind N/S passenger seat
Connection:	24 way

J32 Multiway Connector

Location:	Behind N/S passenger seat
Connection:	19 way

J36 Alarm

Location:	Behind rear passenger seat
Connection:	2 x12 way

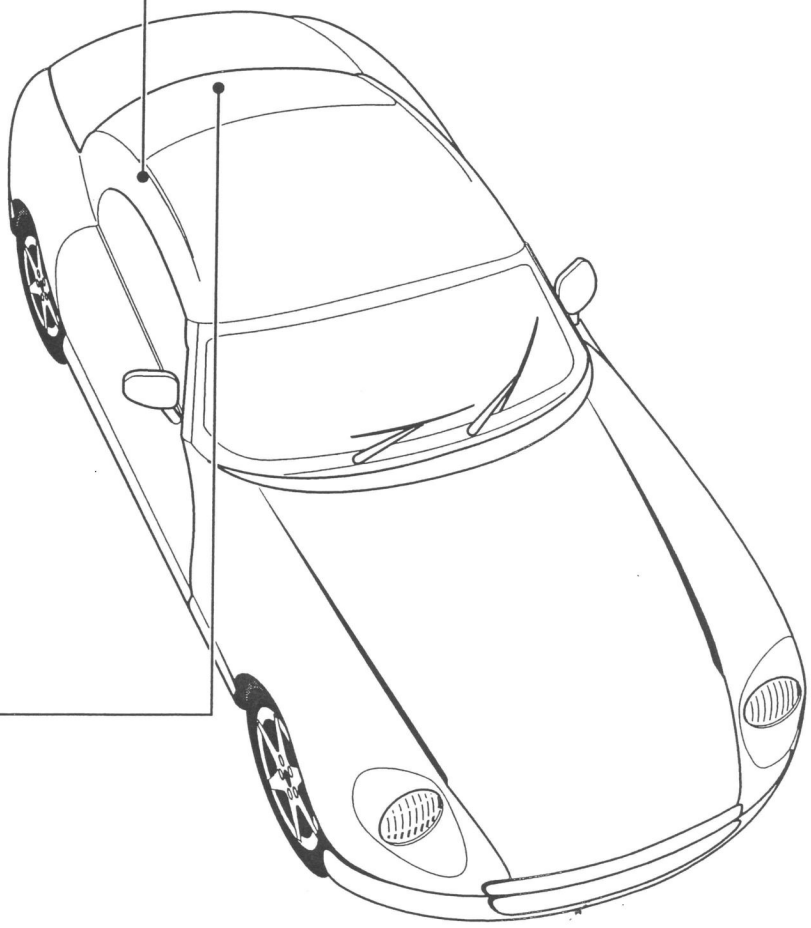

J37 Alarm Accessory Socket

Location:	Behind rear passenger seat
Connection:	1 x 6 way

J38:A+B Boot Courtesy Lamp


Location:	Behind rear slam panel
Connection:	spade connectors

J39 Boot Lid

Location:	Top of righthand side of boot
Connection:	5 way

J40:A+B Boot Lid Switch

Location:	Side of boot
Connection:	Eyelet to spade

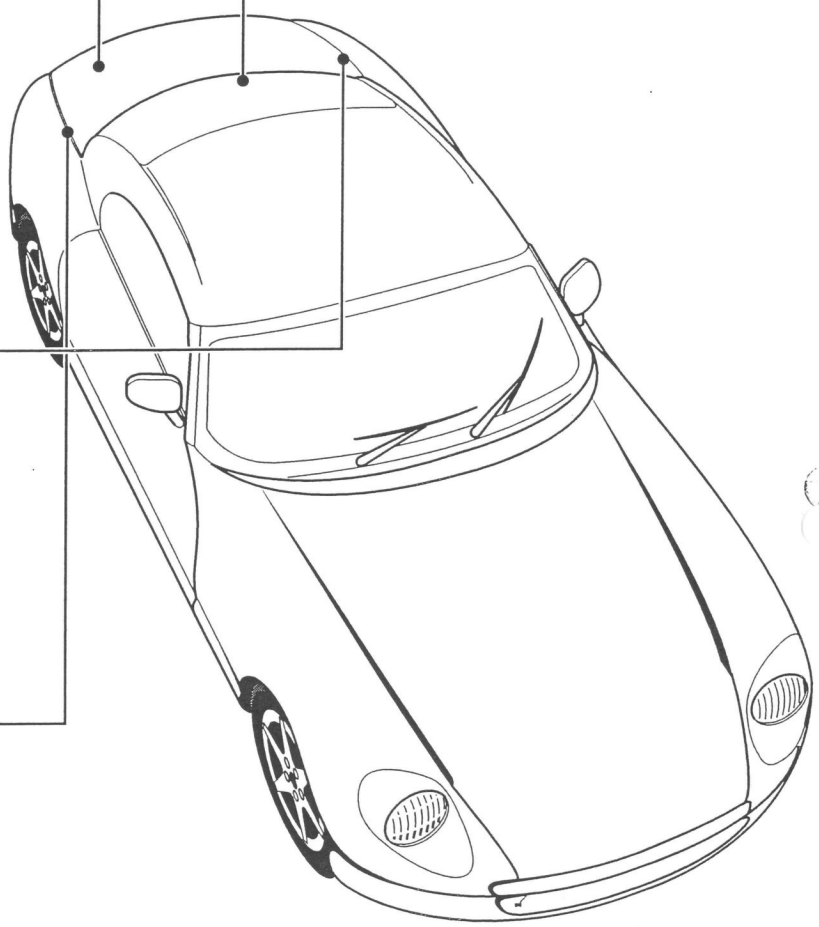

J41:A+B Boot Lock Solenoid

Location:	Behind rear slam panel
Connection:	spade

J42 Boot Release Switch


Location:	Behind rear slam panel
Connection:	2 way

J43 Dim Dip Control Unit

Location:	Top right handside of boot
Connection:	9 way

J44:A,B,C,D,E,F Dim Dip Unit

Location:	Top Of Fuel Tank
Connection:	6 x spade

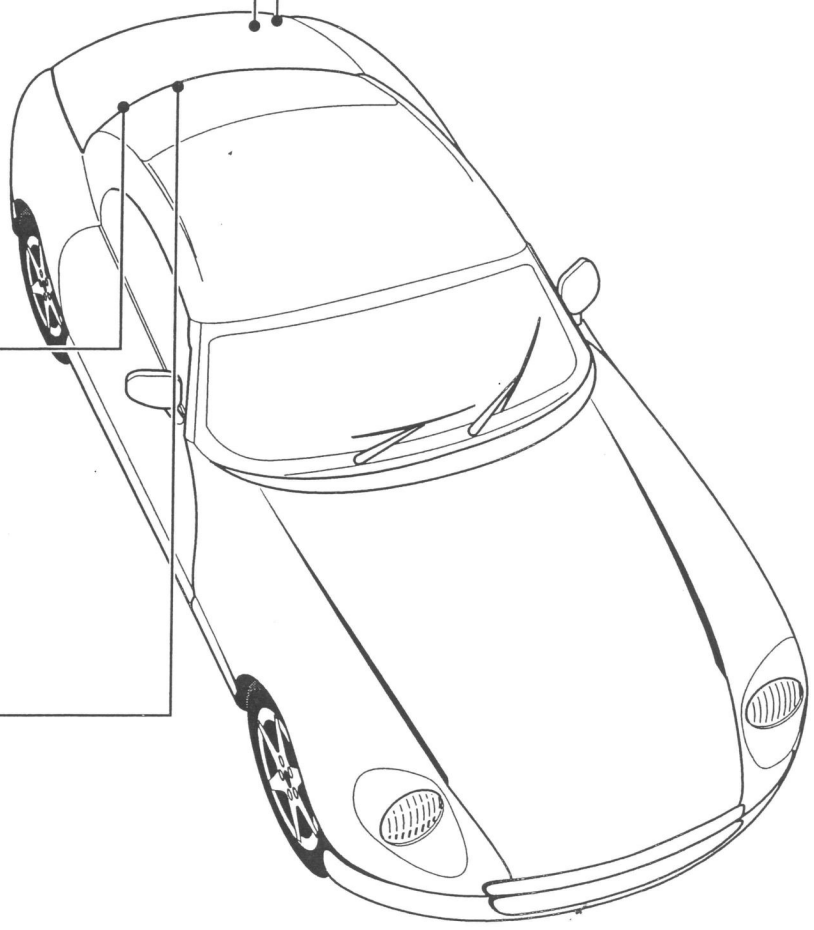

J45+46 Door Lock Control Unit

Location:	Top of Tank
Connection:	17 way + 2 way

J47+48 Door Lock Control Unit


Location:	Top of Tank
Connection:	9 way + 9 way

J49:A+B Driver's Door Lock Motor

Location:	Next to drivers door lock
Connection:	spades

J50 Driver's Seat Belt

Location:	Top of tunnel
Connection:	2 way

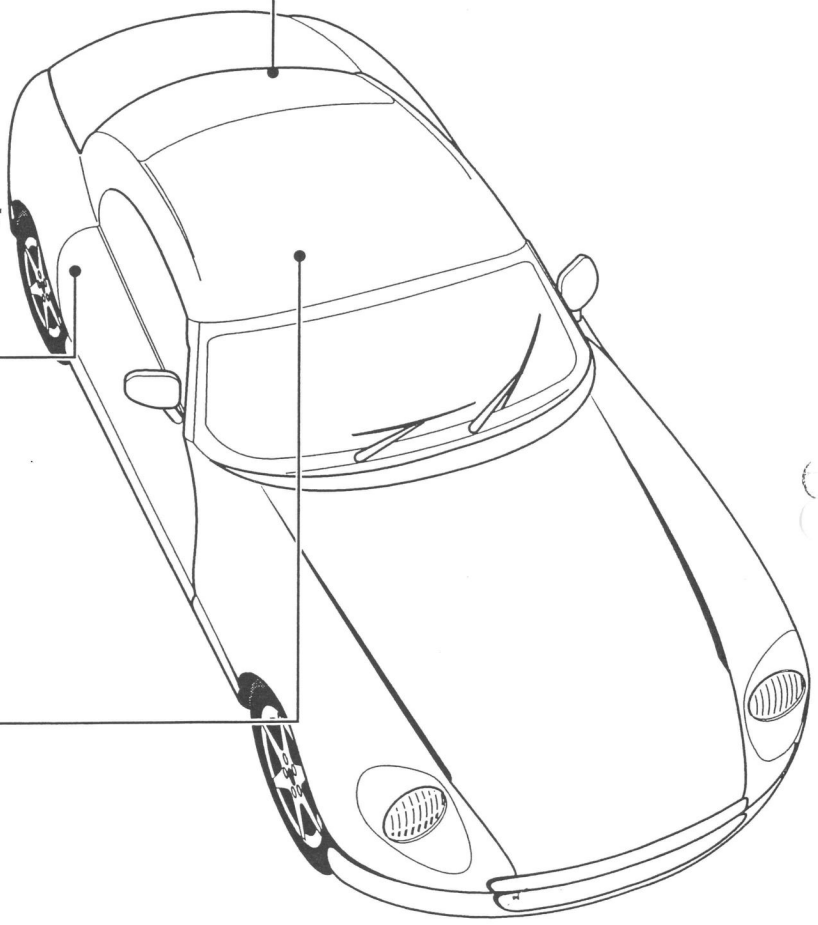

J51 Fuel level sender

Location:	Top of Tank
Connection:	2 way sealed

J52:A+B Fuel Pump


Location:	On chassis leg
Connection:	2 eyelet

J53 Ignition Control Unit

Location:	Top of bank
Connection:	9 way

J54 Immobiliser

Location:	Behind rear seats
Connection:	

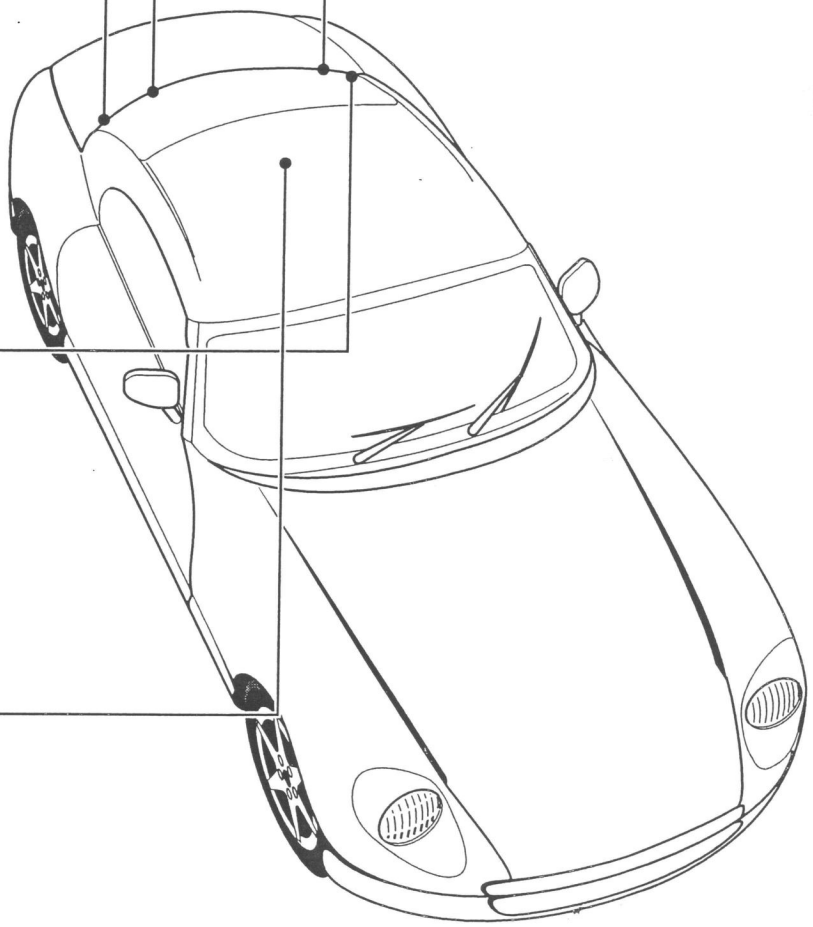

J55 Indicator Control Unit

Location:	Top of tank
Connection:	17 way

J56 Inertia Switch


Location:	Centre of tank
Connection:	3 way sealed

J57 Lights Control Unit

Location:	Top of tank
Connection:	3 way

J58:A+B J59:A+B Number Plate lamps

Location:	Behind number plate
Connection:	3 way

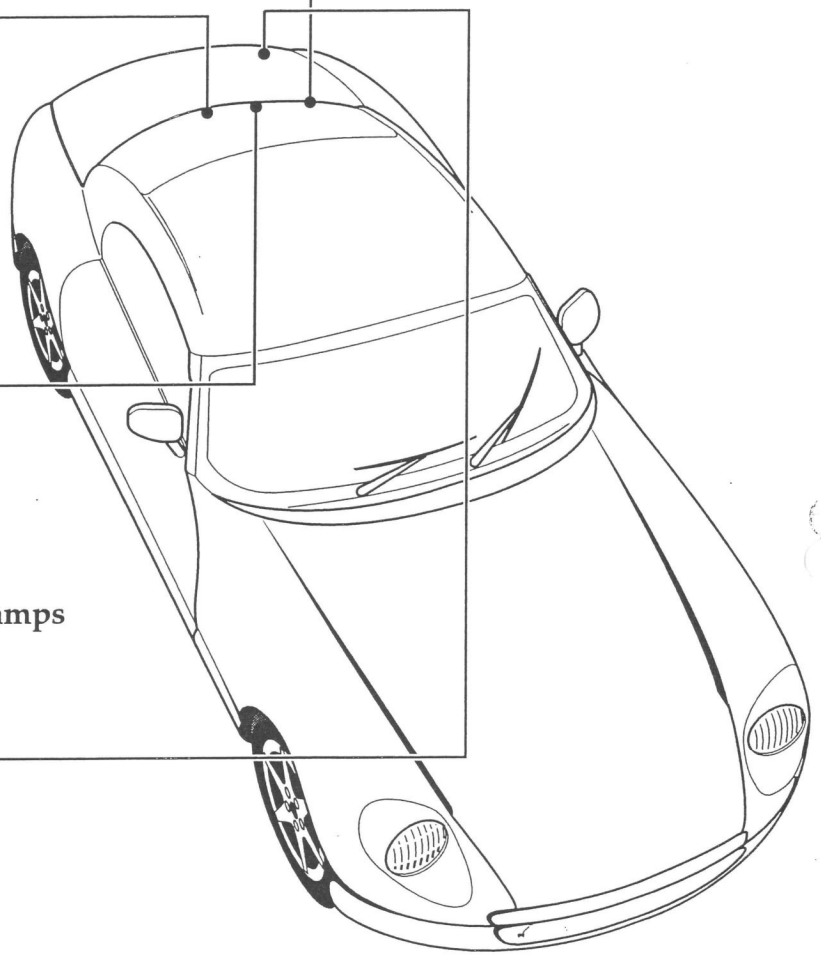

J60:A+B Passenger Door Lock Motor

Location:	L/R of rear window
Connection:	

J61 Purge Valve


Location:	Inside of passenger wheel arch
Connection:	

J62:A+B Rear Speaker

Location:	Behind rear lights
Connection:	5 way

J63:A+B Rear Speaker

Location:	Behind rear lights
Connection:	5 way

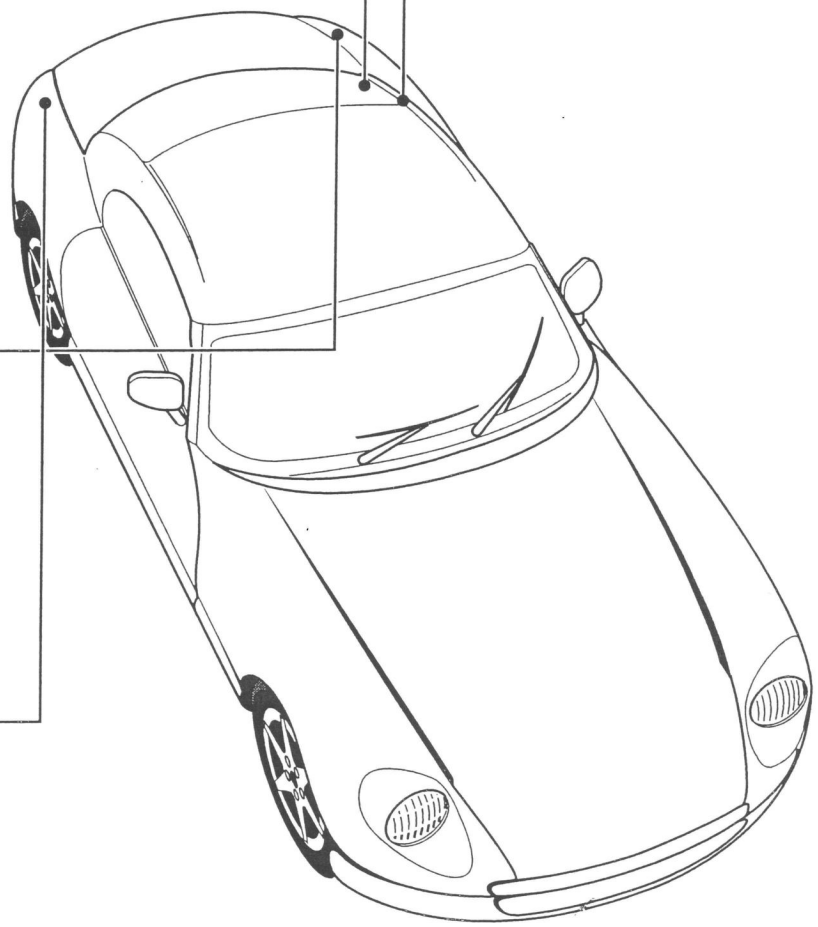

J64:A+B Rear Window

Location:	Top of the passenger footwell.
Connection:	2 way

J65 Rear lamp Cluster (Left)


Location:	Top of the passenger footwell.
Connection:	2 way

J66 Rear lamp Cluster (Right)

Location:	Top of the passenger footwell.
Connection:	2 way

J67 Speedo Speed Sensor

Location:	Top of the passenger footwell.
Connection:	2 way

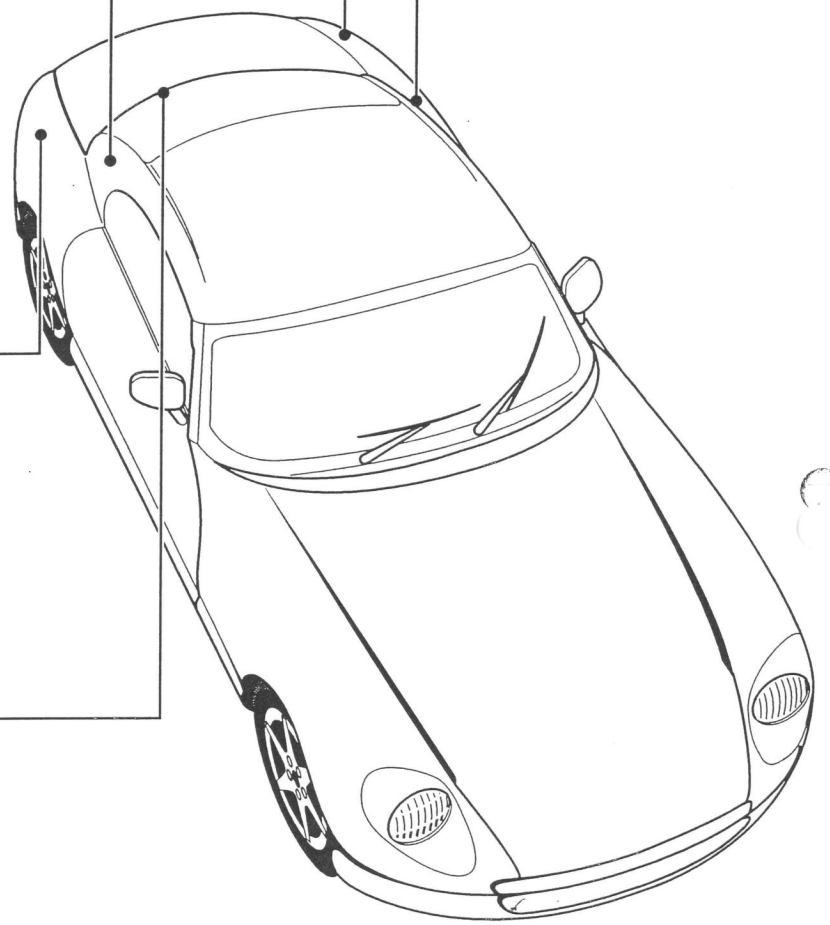

REAR MULTIWAY HARNESS CONNECTORS

J33 Multiway Connector


Location:	Behind drivers seat
Connection:	36 way

J34 Multiway Connector

Location:	Behind drivers seat
Connection:	24 way

J35 Multiway Connector

Location:	Behind drivers seat
Connection:	19 way

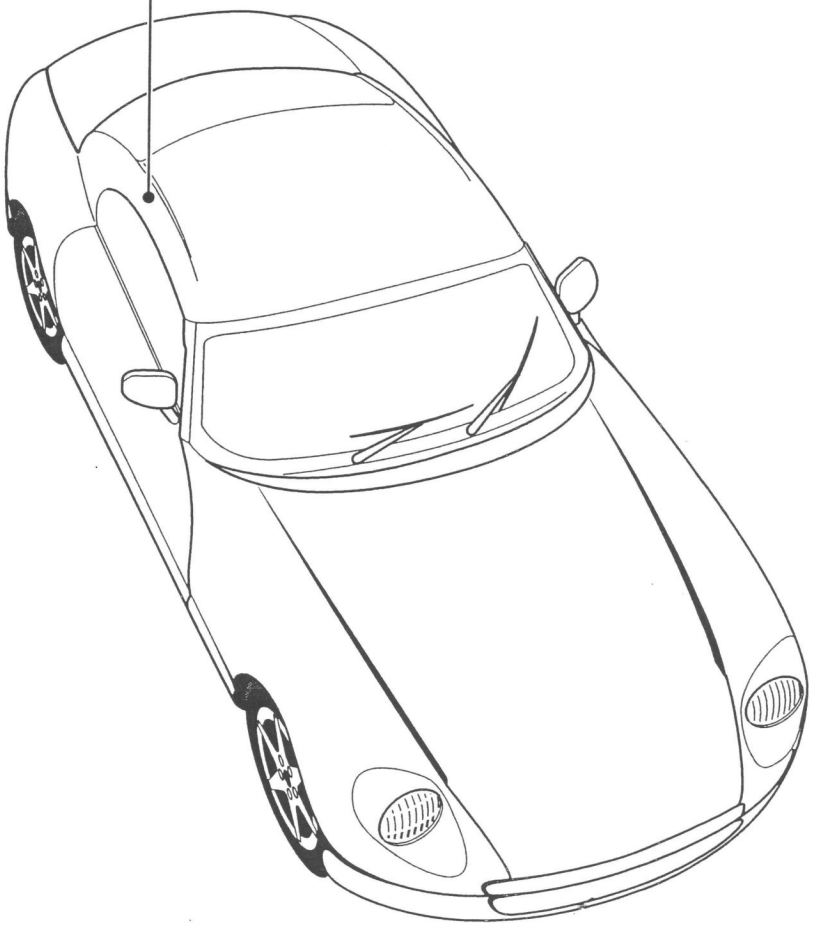

REAR HARNESS FUSEBOARD CONNECTORS

J68 Fuseboard Block A

Location:	Top of the passenger footwell.
Connection:	2 way

J69 Fuseboard Block B


Location:	Top of the passenger footwell.
Connection:	2 way

J70 Fuseboard Block C

Location:	Top of the passenger footwell.
Connection:	2 way

J71 Fuseboard Block D

Location:	Top of the passenger footwell.
Connection:	2 way

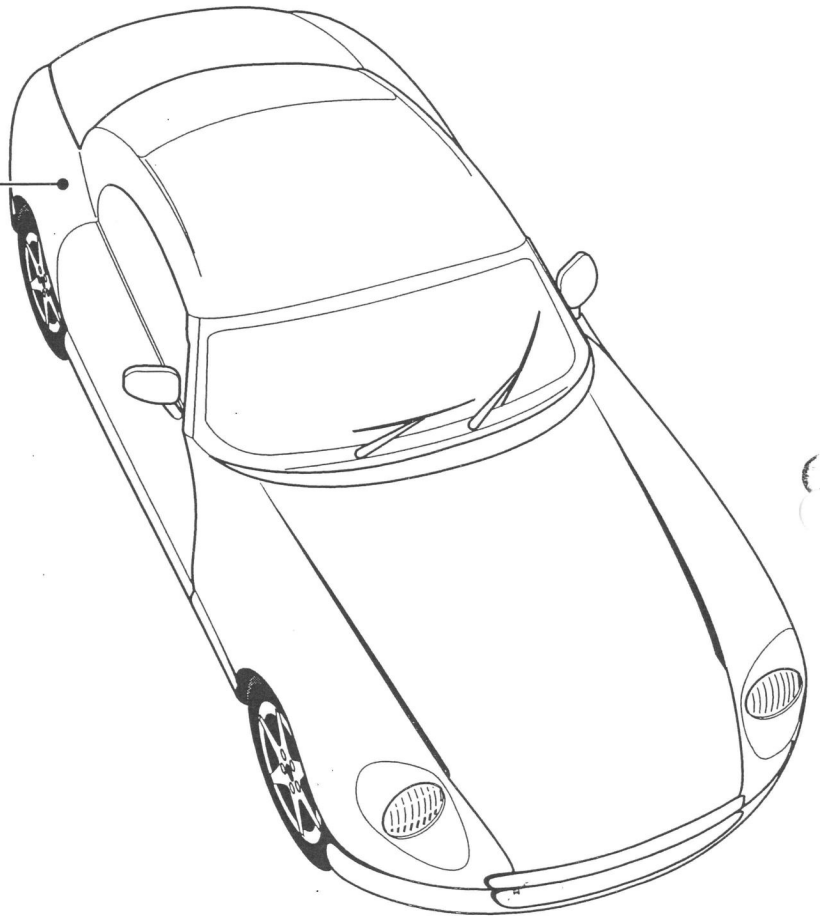

J72 Fuseboard Block E

Location:	Top of the passenger footwell.
Connection:	2 way

J73 Fuseboard Block F


Location:	Top of the passenger footwell.
Connection:	2 way

J74 Fuseboard Block G

Location:	Top of the passenger footwell.
Connection:	2 way

J75 Fuseboard Block H

Location:	Top of the passenger footwell.
Connection:	2 way

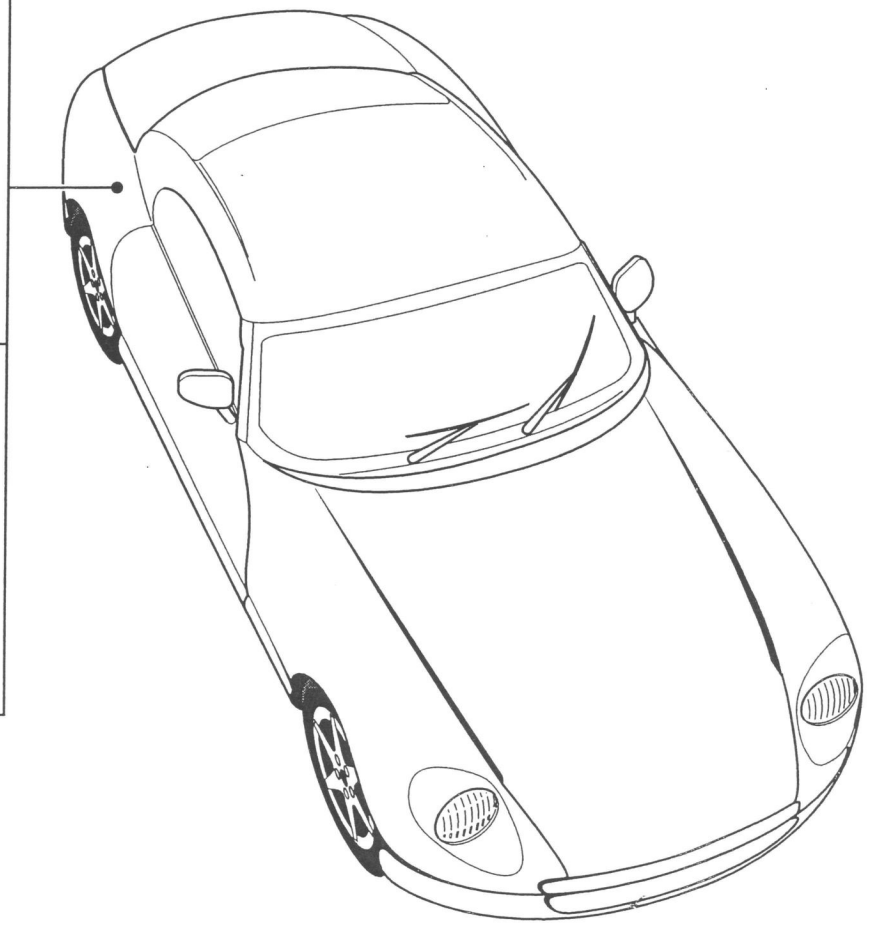

J76 Fuseboard Block I

Location:	Top of the passenger footwell.
Connection:	2 way

J77 Fuseboard Block J


Location:	Top of the passenger footwell.
Connection:	2 way

J78 Fuseboard Block K

Location:	Top of the passenger footwell.
Connection:	2 way

J79: A,B,C,D Fuseboard Block L

Location:	Top of the passenger footwell.
Connection:	2 way

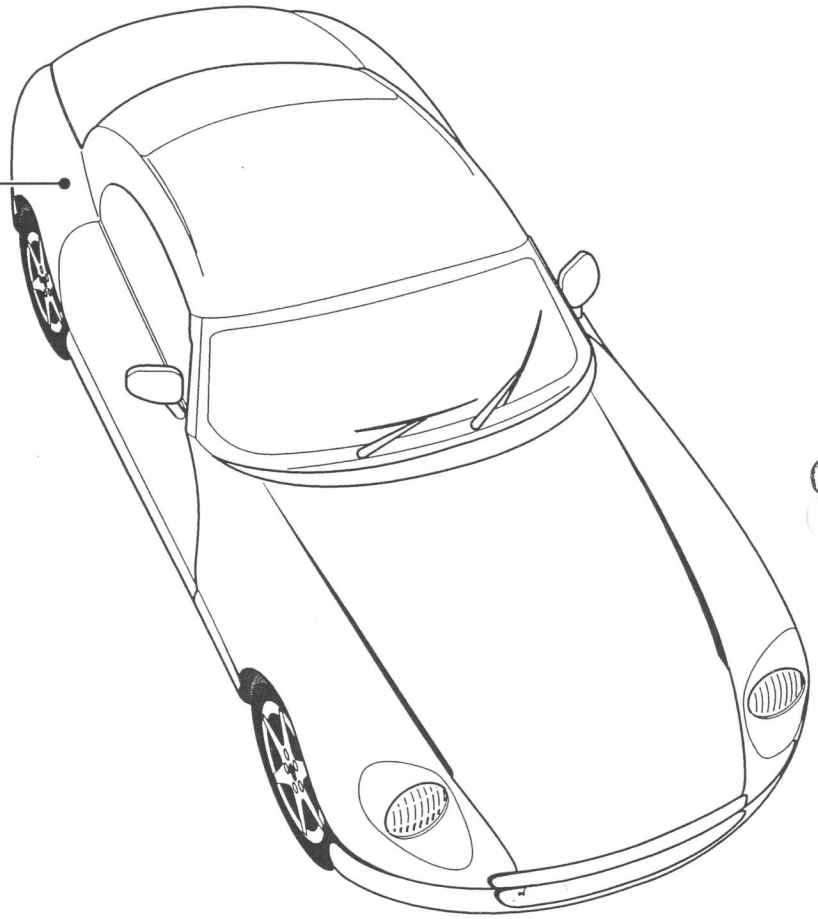

J80:A+B Fuseboard Block M

Internal Light Switch
Location: Top of the passenger footwell.
Connection: 2 way
Colour of wires: Purple & Red

J81 Fuseboard Block P

Internal Light Switch
Location: Top of the passenger footwell.
Connection: 2 way
Colour of wires: Purple & Red

J82 Fuseboard Block R

Internal Light Switch
Location: Top of the passenger footwell.
Connection: 2 way
Colour of wires: Purple & Red

