
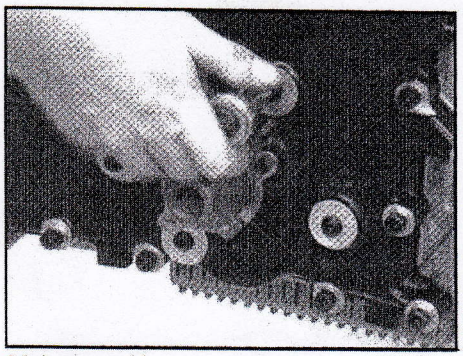



Main Assembly

...and torque to 20 ft lbs.

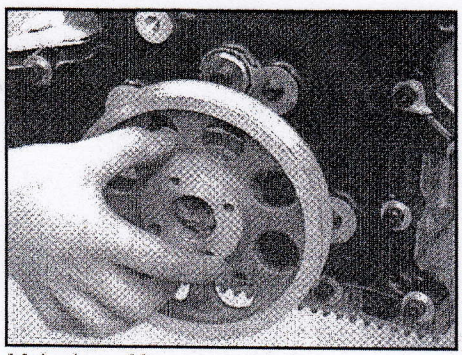


Main Assembly

Finally fit the air con compressor drive pulley.

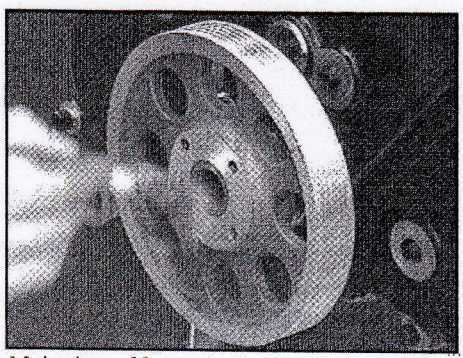

Main Assembly

Degrease the crank nose pinion thread with spirit wipe.

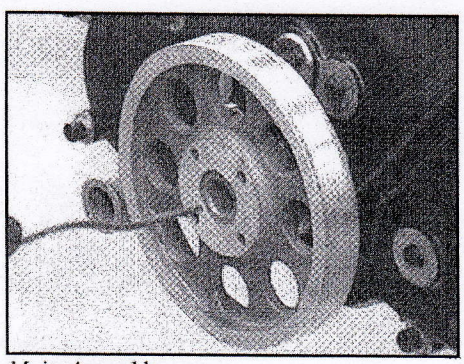

Main Assembly

...and dry using an air gun.