
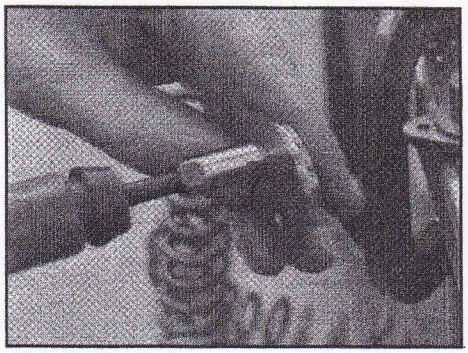



Throttle Control

Then de-burr these holes.

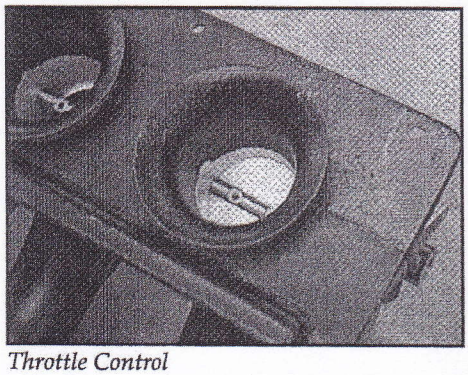


Throttle Control

When fitting butteryfly valve start from throttle pot end.

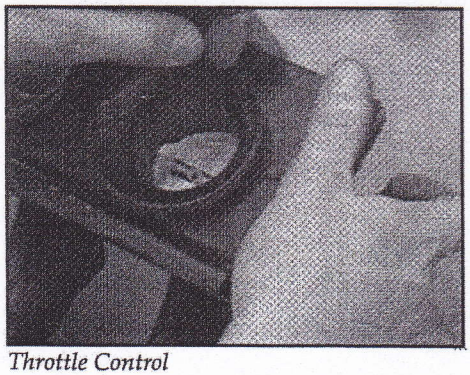

Throttle Control

Ensure correct orientation of butterfly valve in intake port so it will close and seal.

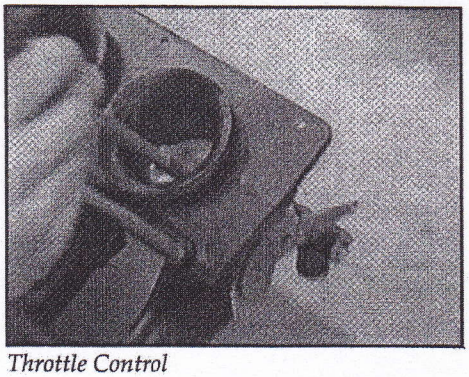

Throttle Control

Loctite and fit machine screws. M3x6mm long, to return butterfly valves.