

AJP 8

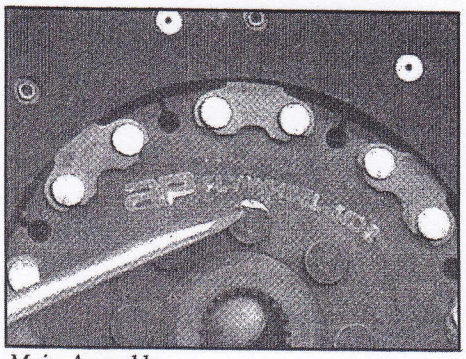


Main Assembly

Fit the first clutch driver plate, noting its orientation...

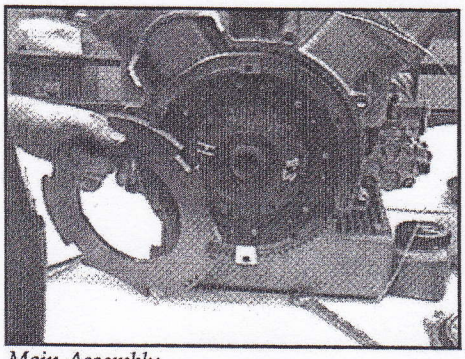


Main Assembly

...followed by the pressure plate.
Note - the balancing point should be aligned and the orientation of the pushover springs i.e.- Thick spring should face towards the flywheel and the thin should face towards the pressure plate.

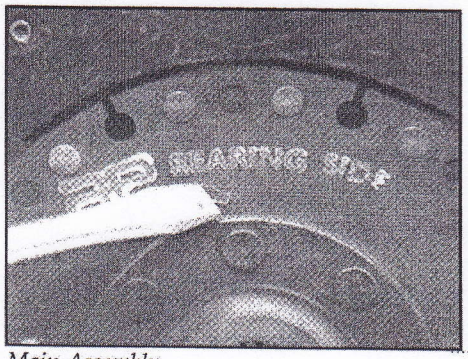

Main Assembly

Followed by the second driver plate, again noting its orientation.

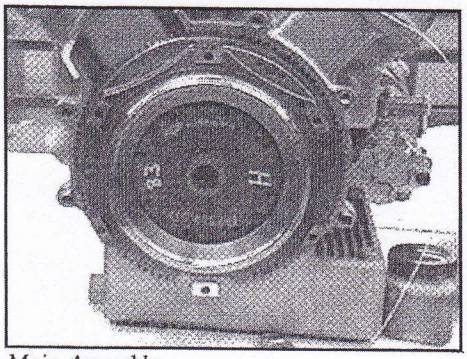

Main Assembly

Followed by the second pressure plate, again aligning the balance paint.