

Section O - Fuel System

N.B. Fuel System part numbers begin with (L)

contents

A

Fuel Pump


B

Fuel Filter MKII



Service / Workshop Manual


Fuel Pump - Removal and Replacement

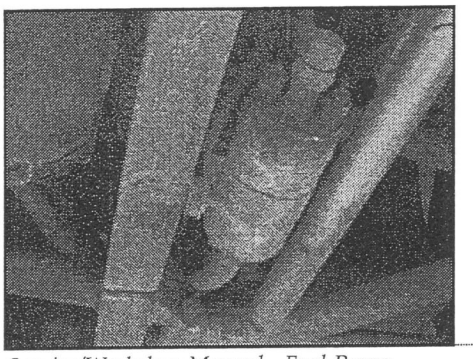

Service/Workshop Manual - Fuel Pump

1


The fuel pump is located on the rear N/S of chassis.

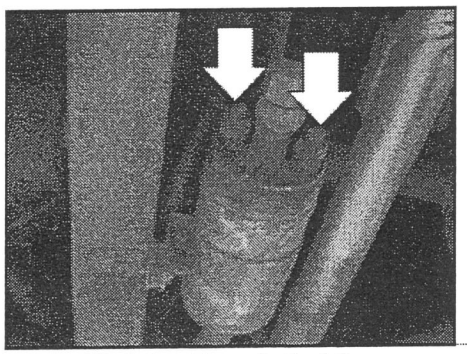

Service/Workshop Manual - Fuel Pump

2


Remove the positive and negative connectoring wires.

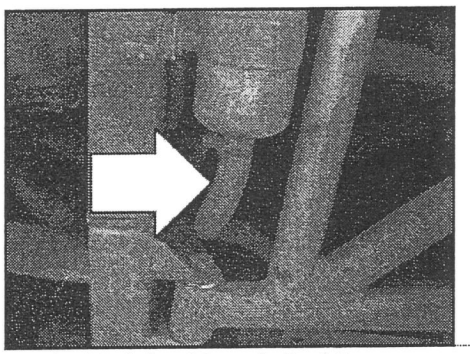

Service/Workshop Manual - Fuel Pump

3

Next clamp the fuel pipe to fuel pump rubber hose.

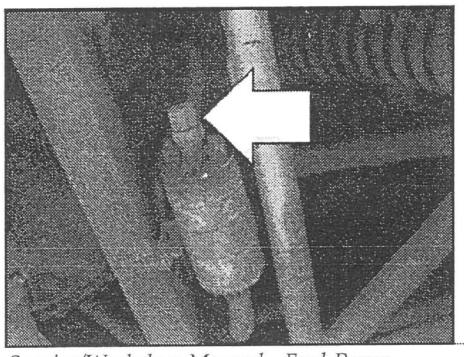

Service/Workshop Manual - Fuel Pump


4

Next remove the banjo nut from the same end and slide off the hose fitting. Discarding the copper washer.
N.B.- some petrol will leak out.



Service / Workshop Manual


Fuel Filter MKII 8/97 ONWARDS

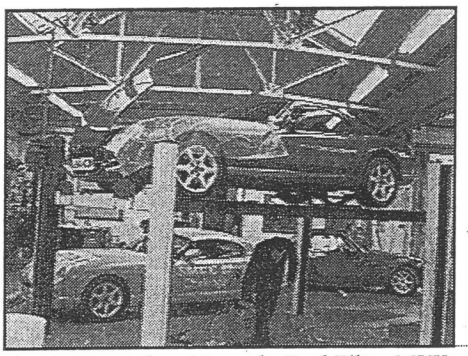

Service/Workshop Manual - Fuel Filter MKII

1


The fuel filter on the cerbera is mountded in two positions:-
(A) Pre 8/97 cars will have a fuel filter mounted on the top of the rear of the chassis in a similar position as the Griffith and Chimaera models.
(B) Cars made after 8/97 will have a fuel filter mounted under the N/S wheel.

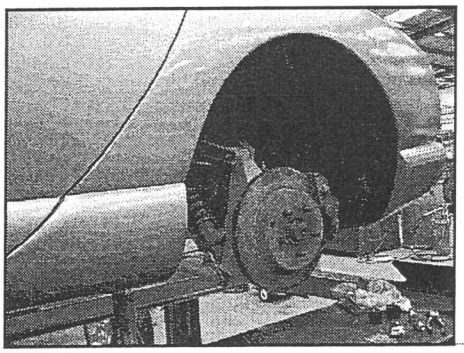

Service/Workshop Manual - Fuel Filter MKII

2


To complete the operation of changing a fuel filter a second pair of hands will be needed. Raise the car on a ramp at shoulder level. Remove the rear N/S wheel.

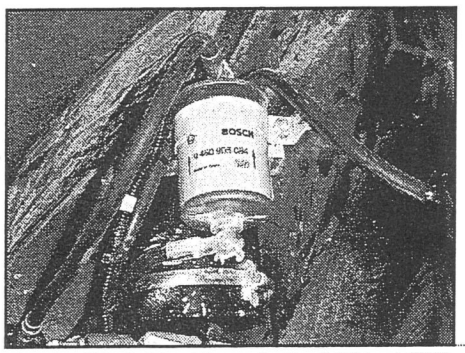

Service/Workshop Manual - Fuel Filter MKII

3


The fuel filter is located on the underside of the wheel arch.

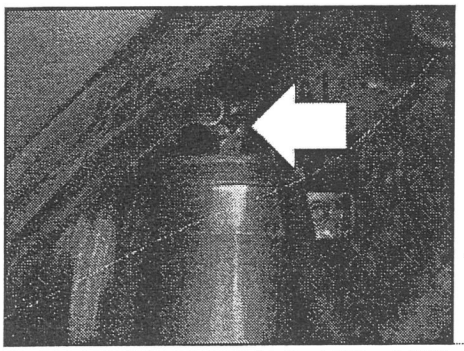

Service/Workshop Manual - Fuel Filter MKII

4


Carefully unbolt the top banjo bolt. This will de-pressurise the fuel filter and will result in some fuel spraying out.

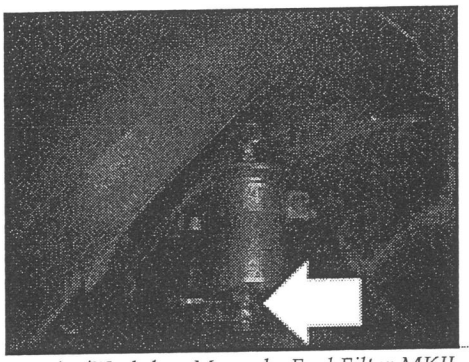

Service/Workshop Manual - Fuel Filter MKII

5


Next undo the bottom banjo bolt.

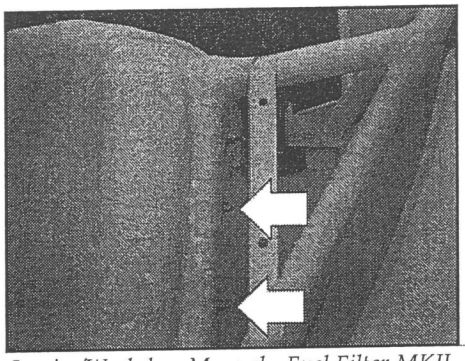

Service/Workshop Manual - Fuel Filter MKII

6

Finally to remove the filter bracket a second person will need to remove the egg panel behind the rear seats and hold the bracket nuts, as the first person removes the bolts from the other side.

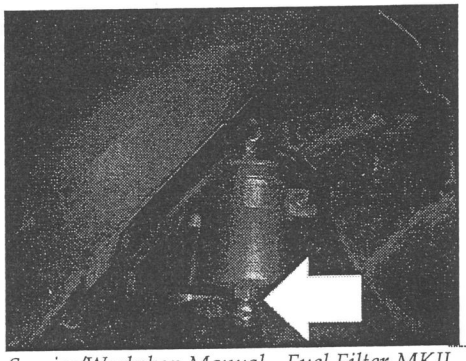

Service/Workshop Manual - Fuel Filter MKII

7

To replace reverse the outlined procedure remembering to fit new cooper washers.